



Quick start guide


Evaluation kit

1

Connect IR components with interfaces

JSIR emitter > emitter interface

Detector > detector interface

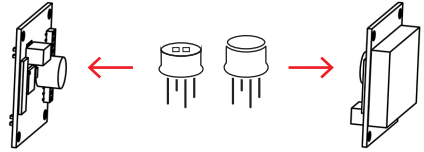

⚠ Shorten components with a pin length of over 6 mm before mounting with side cutters to 6 mm.

2


Connect detector interface with matching config board

Thermopile config board single > 2 channel thermopile

Thermopile config board multi > 4 channel thermopile

Pyro config board single > 2 channel pyro

Pyro config board multi > 4 channel pyro

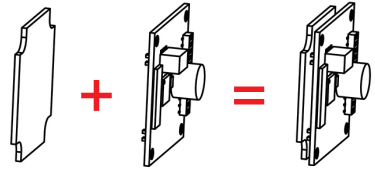


3

Attach interfaces to cuvette

Remove the screws of the cuvette spacer.

Place the interfaces.

Tighten the screws.

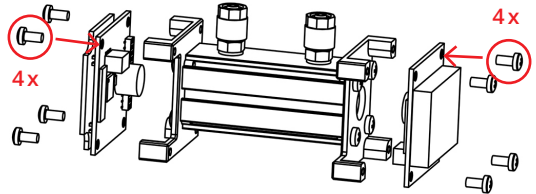


4

Connect assembled cuvette and main unit

Attach cuvette to the magnets on the main unit.


Connect interfaces and main unit with cables.

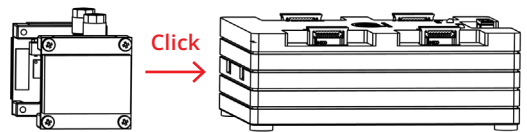

5

Connect to your computer

Plug in USB cable and power supply.

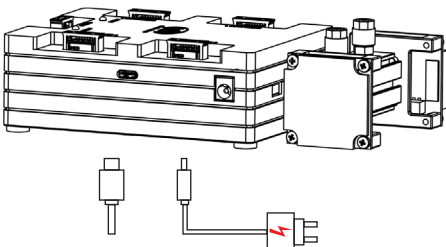

6

Get ready to measure

Download and install software.

Open the eNDIRi² app and start your NDIR adventure!

